# Instruction Manual

HYUNDAI TELECOM

HAS-R3071



Thank you for purchasing of HYUNDAI TELECOM.
Since this system is developed and produced by a R&D center of HYUNDAI TELECOM and has various convenient functions, please read this Instruction Manual carefully before use so you can fully understand the use of the equipment. The functions of this product or the content of the Instruction Manual can be modified without a prior notice for the purpose of quality improvement.

# Table of contents


**I Precautions**
01 Precautions on use — 04
02 External structure and description — 06
03 Installation and wiring — 07
04 Composition of product — 08

**II How to use**
01 Screen construction — 09
02 Calling option — 17
03 Away mode — 19
04 Emergency mode — 21

**III Specification**
01 Specification — 22
02 Product warranty — 24

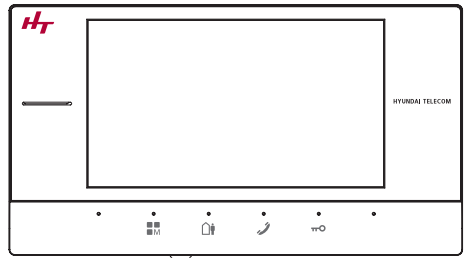






⚠ This part contains matters that can result in a serious injury or even death. Please read and be fully aware of the contents for the correct use of the equipment.



Any attempts of disassembly, repair, remodeling are prohibited.



Do not have the product exposed to a physical impact, smoke, oil, or water.



Do not use water or chemicals, such as alcohol, to wipe the outside of the product with but use only a piece of dry cloth.



If there is any abnormal noise, smell, or smoke coming out of the product, stop using it immediately and call the Service Center.



Do not install the product in a place that is either hot or humid due to a heating equipment or such or is exposed to direct sunlight.



For the prevention of an injury, the product has to be fixed on the ground or wall safely according to the installation manual.





⚠ This part contains matters that can result in an injury or a property damage. Please read and be fully aware of the contents for the correct use of the equipment.



Do not place any equipments that generate strong magnetism(a large TV or speaker) near the product.



Be careful not to have water get into a camera of a doorphone while cleaning the entrance.



This product does not operate if a circuit breaker is shut down or in case of a blackout.



Do not press buttons with a sharp object, such as an awl or a pin, or put such into the hole.



Do not leave the equipment in a place where water drops or splashes.



Please keep the Instruction Manual safely and, if moving to a new house, hand over the manual to the new owner of your house.

* Electrical installation of building needs to be equipped with a bipolar main power switchwhere both poles have a contact separation of at least 3mm or bigger.




| | | |
|---|---|---|
| 1 | **Menu** ⮌ | Enter the configuration menu. |
| 2 | **Away** ← ↑ | Able/disable door monitoring and away mode. |
| 3 | **Call** → ↓ | Able to press the button to answer a call from a door phone. |
| 4 | **Open** ✓ | Able to open the door. |





## Installation

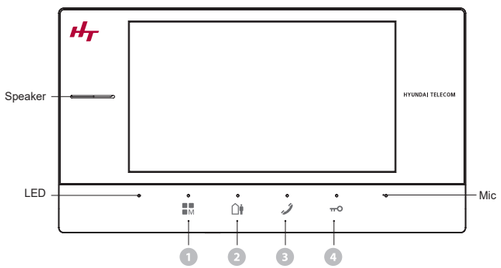


### Installation Order

1. The back box is buried at a height of 1400mm ~ 1500mm from the bottom.
2. Arrange the wires so that they can be connected to the SET, and then fix the WALL BRACKET to the back box by adjusting the angle using the SCREW(M4X25, 4EA).
3. Complete the internal wiring of the HAS-R3071
4. Hang MAIN UNIT on hook of 2 places of WALL BRACKET and match HOLE CENTER of "A" part with HOLE CENTER of HAS-R3071
5. Fix using SCREW(M3X6, 1EA) to HOLE CENTER of "A" site.

## Wiring

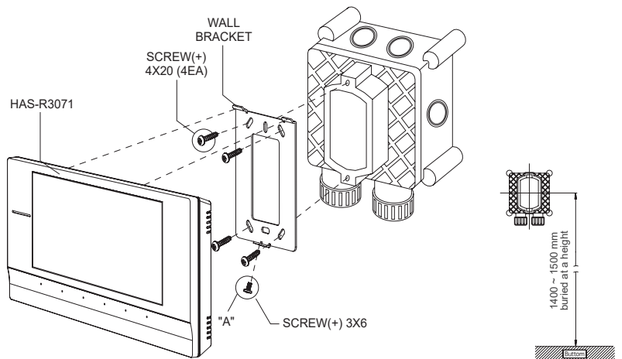


### Important Mounting Notes

Do not install the monitor and camera units where they will be exposed to dirt, direct sunlight(or other strong light), direct moisture, high temperature(over 50℃) or high humidity conditions.
Do not select an installation location subjected to vibration or pounding.
Select a mounting location close to an AC outlet where it is easy to view the LCD screen and operate the monitor.

## HAS-R3071

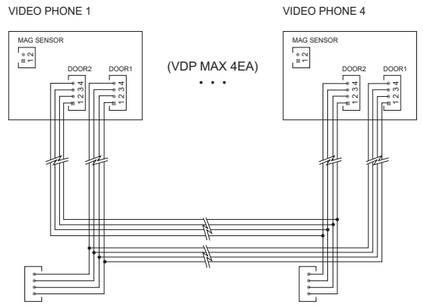

Product



Bracket




Mag sensor wire 2P(1EA)




Door camera wire 4P(2EA)



4X20mm(4EA)
Bracket fix Screw



3X6mm(1EA)
Product fix Screw

## HDS-R1000




Product



Bracket



3X6mm(1EA)
Product fix Screw



4X20mm(2EA)
Bracket fix Screw

## HDS-R2000




Product



4X30mm(2EA)
Product fix screw



3.5X30mm(2EA)
Product fix screw



Screw cap(2p)
Screw cover



6X35mm(2EA)
Wall use



* Above image may be differed by each model and options are included.



## 1. MAIN

The touch buttons on the bottom of the LCD allow you to operate the machine.

* During setup, you can operate with the LCD bottom buttons(Return, Left, Right, Select).




### Menu Composition




### Function

| Menu | Function |
|---|---|
| DISPLAY | Able to adjust the screen color,contrast, saturation, screen off time. |
| SOUND | Able to select the ringer volume, call volume, and ringtone. |
| SETTING | Able to view Password Settings, Time Out Mode, Language Setup, Time Setup, and Information. |
| ADMIN | Call end time / initialization. |
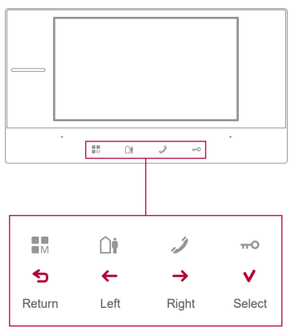
## 2. DISPLAY

Able to set the brightness, contrast, hue and screen off time.

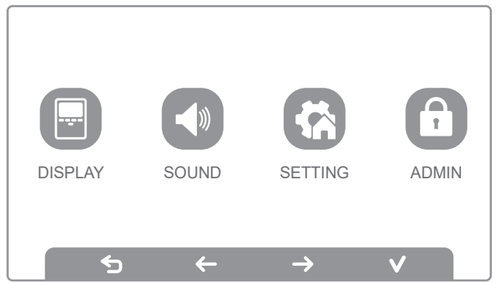* Each menu can be changed in 1 ~ 4 steps.
* The initial settings are set in two steps.
* During setup, you can operate with the LCD bottom buttons(Return, Left/Up, Down/Right, Select).




### Menu Composition




### Function

| Menu | Function |
|---|---|
| Contrast | Adjust contrast. |
| Brightness | Adjust Brightness. |
| Hue | Adjust Hue. |
| Display Off Time | Adjust the off time for display. |

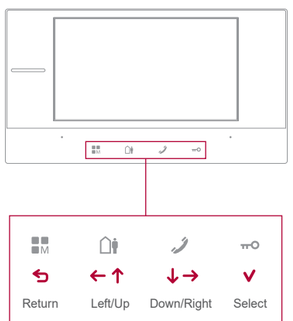



## 3. SOUND

Able to set door phone volume, door phone call volume and melody type.

* During setup, you can operate with the LCD bottom buttons(Return, Left/Up, Down/Right, Select).




### Menu Composition




### Function

| Menu | Function |
|---|---|
| Door Phone Volume | Adjust the volume of door phone. |
| Call Volume | Adjust the call volume of door phone. |
| Ringtone | Select the melody. |
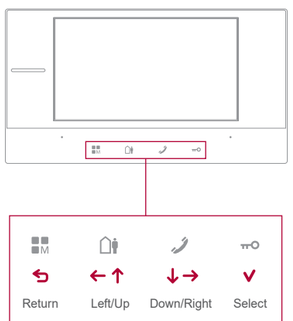
## 4. SETTING(1)

Able to change the password, go out, set the release time, and set the language.

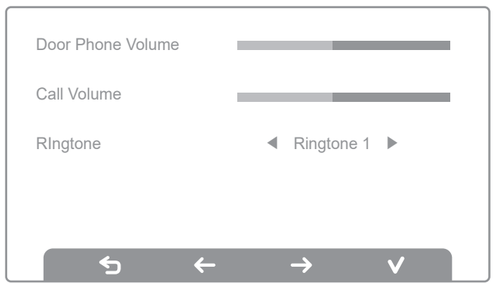* During setup, you can operate with the LCD bottom buttons(Return, Left/Up, Down/Right, Select).




### Menu Composition




### Function

| Menu | Function |
|---|---|
| Password | Able to change your password. |
| In Delay Time [Away Mode] | Able to change the time set for outing mode. |
| Out Delay Time [Away Mode] | Able to change the time out. |
| Language | Able to set the language. |

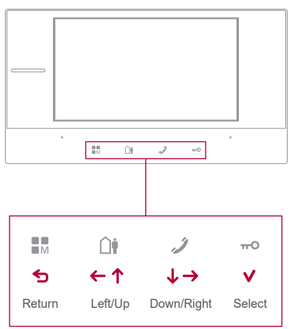

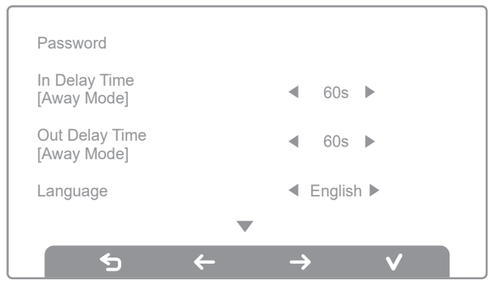

## 4. SETTING(2)

Able to check the product information.

* During setup, you can operate with the LCD bottom buttons(Return, Left/Up, Down/Right, Select).




### Menu Composition




### Function

| Menu | Function |
|---|---|
| Information | Able to check the product information. |
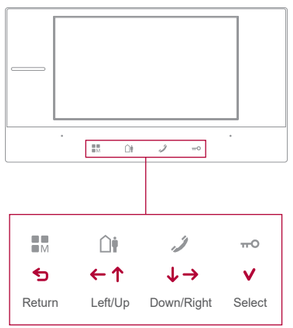
## 4. SETTING-Password

This is a menu to change the user's password when setting or canceling the outing mode.

* Enter current password once and new password twice
* When entering a password, 4 touch buttons at the bottom of the LCD enable 1 ~ 4




### Menu Composition




### Function

| Menu | Function |
|---|---|
| LCD bottom button | Enter the numbers 1-4.<br>* If password input fails: 1-Exit / 4-Retry |

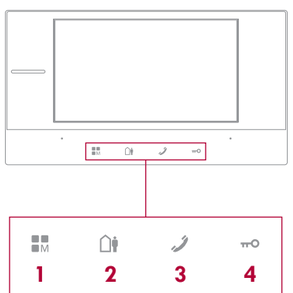

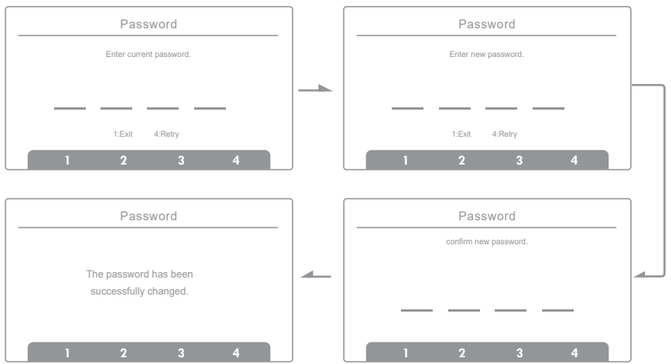

## 4. SETTING-Information

Able to check the product information.

* During setup, you can operate with the LCD bottom buttons(Return, Left, Right, Select).




### Menu Composition




### Function

| Menu | Function |
|---|---|
| Information | Able to check the product information. |
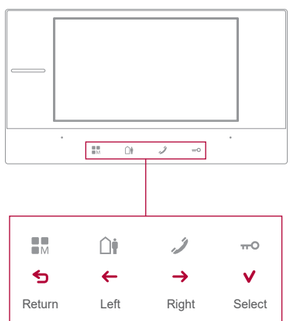
## 5. ADMIN

Able to reset the end time and product.

* During setup, you can operate with the LCD bottom buttons(Return, Left/Up, Down/Right, Select).




### Menu Composition




### Function

| Menu | Function |
|---|---|
| Call End Time | Able to set the call end time. |
| Factory Reset | Able to do factory reset. |

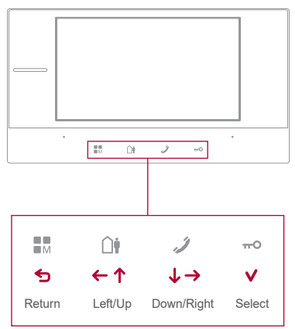

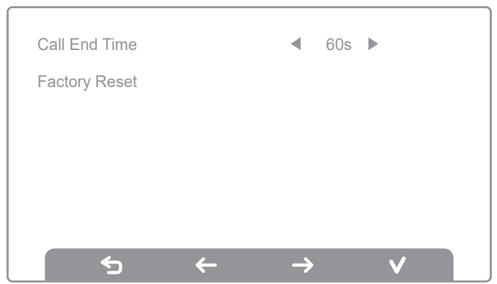

## 1. Talk with Door Phone

Able to answer a call from a door phone.

Please be careful when using the door open function as it may cause a security problem caused by a user's mistake.

### When a call comes from the door phone






The door phone icon on the screen is displayed with the door phone video and a ring tone sounds. Press the call button to answer a call as above. If user does not answer a call, it will end automatically after 30 seconds.

### End a door phone call (automatic termination after 2 minutes)

Press the call button once more during a call to end the call.




### About a door open function

If user press the Door Open button during a call, the door opens and the call ends automatically.




### If a call comes from door phone 2 while talking on door phone 1




When a call comes from Door Phone 1, the Door Phone 1 icon flashes and a blue icon is displayed when user press the Call button.
The Door Phone 2 icon blinks when a call is received from Door Phone 2 during a call with Door Phone 1. Pressing the call button ends the call with door phone 1 and starts the call with door phone 2.




When a call comes from Door Phone 2, the Door Phone 2 icon flashes and a blue icon is displayed when user press the Call button.
The Door Phone 1 icon blinks when a call is received from Door Phone 1 during a call with Door Phone 2. Pressing the call button ends the call with door phone 2 and starts the call with door phone 1.

### If user want to see the video outside the entrance(monitoring the entrance)




User can monitor the door phone 1 by pressing the go button once and the door phone 2 by pressing it again.
If user press the call button during monitoring, the call starts and you can talk up to 2 minutes.





## 1. Before use

A password is required to turn on / off the mode.(* The initial password is "1234")

### Terms

Delay time: The time from when user set outing, until user return or leave user's home.
See In Delay Time [Away Mode] setup menu on page 13 to change the delay time..

## 2. Away Mode

You can set an away mode before going out to interutor

* When inputting password, 4 touch buttons at the bottom of the LCD enable 1 - 4 input




### How to set Away Mode

If user close all doors and press the button and enter the password in the password input window as shown below, a "beep-beep" sound will be displayed indicating the delay status. After the delay is completed, Away mode is activated.




- After checking if there is any problem, close the front door and go out.
* Must be set after closing the door.

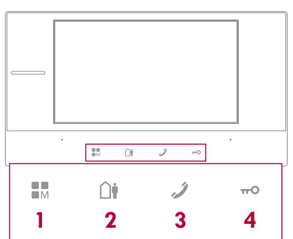- Alarm does not occur even if abnormality is detected within the delay time.

# 03 Away mode

* When entering a password, 4 touch buttons at the bottom of the LCD enable 1 - 4

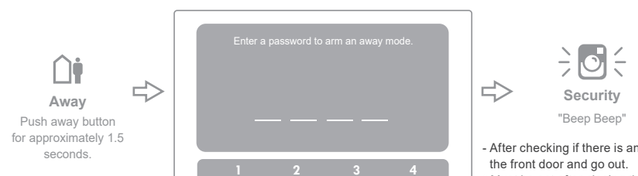


## To disarm Away Mode

During the away mode, enter your home and disarm the away model quickly as follows.




ERROR display screen when password is incorrect

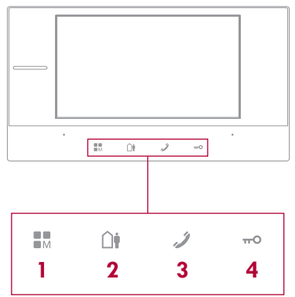


If user fail to enter the password, press button 1 to go back to the previous screen, or press button 4 to retry.

SENSOR ERROR display screen




If the door is open when you go out / on, the Error screen appears.

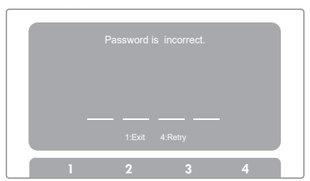



# 04 Emergency Mode
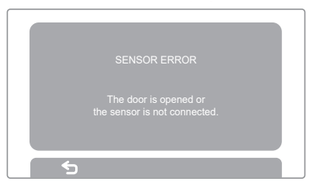
## 1. Before use

If you can not disarm the away mode, an emergency mode is activated and you need to enter a password to disarm the emergency mode.(* the password is the same with away mode password)

## 2. Emergency Mode

If an emergency mode is not disarmed or an intrusion is detected, the video door phone and door phone make the alarm sound.

* When inputting password, 4 touch buttons at the bottom of the LCD enable 1 - 4 input




## How to disarm Emergency Mode

Once an emergency mode is activated, Emergency Mode shows on the screen. Push an away button and enter a password then the emergency mode is inactivated.(If an emergency mode is not disarmed, it will be disarmed in 15 minutes.)



### HAS-R3071(Main Unit)

| Division | | Specificaton |
|---|---|---|
| Power source | | AC 100~240V / 50~60Hz |
| Power Consumption | | MAX 14W |
| Talk | | Speaker phone |
| LCD info. | LCD | 7inch TFT-LCD |
| Environment | Temperature | 0℃ to +40℃ |
| Apperance | Size | 239 W X 132 H X 25 D(mm) |
| | Weight | 384g |
| Installation | | Surface |

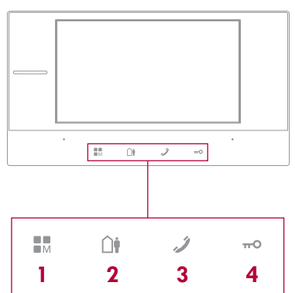* Power consumption of this unit may vary depending on peripheral devices.



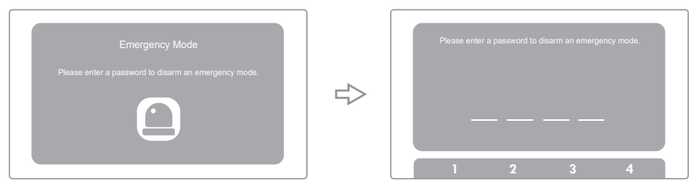

### Door Phone

| Items | | Specificaton | |
|---|---|---|---|
| | | HDS-R1000 | HDS-R2000 |
| Power Consumption | VN | Maximum 3.0W(Power supplied from monitor) | Maximum 3.0W(Power supplied from monitor) |
| | VP | Maximum 3.0W(Power supplied from monitor) | Maximum 3.0W(Power supplied from monitor) |
| | HD | Maximum 5.0W(Power supplied from monitor) | Maximum 5.0W(Power supplied from monitor) |
| Resolution | VN | VGA(0.3M pixel), NTSC | VGA(0.3M pixel), NTSC |
| | VP | VGA(0.3M pixel), PAL | VGA(0.3M pixel), PAL |
| | HD | HD(1M pixel) | HD(1M pixel) |
| Illumination | | 0.1Lux | 0.1Lux |
| Environment | Temperature | -10℃ to +50℃ | -10℃ to +50℃ |
| Size | Dimension | 96W X 156H X 34D(mm) | 88W X 119.6H X 20D(mm) |
| | Weight | 296g | 236g |
| Installation | | Surface / Flush Mount Type | Surface / Flush Mount Type |

## Warranty Conditions

**HYUNDAI TELECOM** Products are supplied with ( ) year return to base warranty From the date of purchase, We will repair or replace the defective item with a new or factory rebuilt replacement.

### Condition

1. This warranty applies to the original purchaser only.
2. All warranty will be invalid if unauthorized repair or modification are made to the unit or in any case of accident, misuse, damage cause by improper installation and altered serial numbers.
3. The liability of **HYUNDAI TELECOM** is limited to the cost of repair/ replacement of the unit under warranty.
4. If you need a warranty service, you should send the product to our customer service Dep't or dealer office. The product in all cases must be accompanied by the following items :
   Your name, address, telephone number, the serial number, copy of your sales receipt showing the purchase date.

The Model Number is on the box and front of the manual, The Serial Number is on the bottom of the unit, Record the Model and Serial Numbers in the spaces provided below, Refer to these numbers for warranty service.

*Model No.* _____ *Serial No.* _____

### WEEE(Waste Electrical & Electronic Equipment)

***Correct Disposal of This Product***
***(Applicable in the European Union and other European countries with separate collection systems)***



This marking shown on the product or its literature, indicates it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contact. This product should not be mixed with other commercial wastes for disposal.



HAPPY TOGETHER, HAPPY TOMORROW

HAS-R3071

www.hyundaitel.com
Hyundai Telecom Bldg.,107,
Yeouidaebang-ro, Yeongdeungpo-gu,
Seoul, 07433, KOREA
Tel +82.2.2240.9234/9271



**شركة هيونداي تليكوم المحدودة**

www.hyundaitel.com
مبنى هيوندي للاتصالات، 107،
يويدوبانغ-رو، يونغ دونغبو-غو،
سيول، 07433، كوريا الجنوبية
هاتف: +82.2.2240.9234/9271

## شروط الضمان

**HYUNDAI TELECOM**

يتم توفير المنتجات مع سنة واحدة من ضمان استرجاع المنتج من تاريخ الشراء، وسوف نقوم بإصلاح أو استبدال البند المعيب بأخرى جديدة أو معاد تصنيعها.

### الشروط

1. يطبق هذا الضمان على المشتري الأصلي فقط
2. عدم سريان جميع الضمانات في حال إجراء إصلاح أو تعديل غير مصرح به إلى الوحدة أو في أي حالة من الحوادث، سوء الاستخدام، الضرر ناتج عن التثبيت غير الصحيح وتبديل الأرقام التسلسلية.
3. تقتصر مسؤولية شركة هيونداي للاتصالات على تكلفة إصلاح/ استبدال الوحدة تحت الضمان.
4. إذا كنت بحاجة إلى خدمة الضمان، يجب عليك إرسال المنتج إلى قسم خدمة العملاء أو مكتب التاجر. وفي كل الحالات يجب أن يكون مع المعلومات التالية: اسمك وعنوانك ورقم هاتفك والرقم التسلسلي ونسخة من إيصال البيع الذي يظهر تاريخ الشراء.

رقم الموديل موجود في الصندوق وأول دليل الاستخدام، الرقم التسلسلي في الجزء الأسفل من الوحدة، سجل النموذج والأرقام التسلسلية في المساحات المتوفرة أدناه، ارجع إلى هذه الأرقام للحصول على خدمة الضمان.

رقم الموديل _____ الرقم التسلسلي _____

*(نفايات المعدات الكهربائية والإلكترونية) WEEE*

التخلص الصحيح من هذا المنتج

**(يطبق في الاتحاد الأوروبي والبلدان الأوروبية الأخرى ذات أنظمة الجمع المنفصلة)**

هذه العلامة التي تظهر على المنتج أو النشرة المطبوعة الخاصة به، تشير إلى أنه لا ينبغي التخلص منه مع النفايات المنزلية الأخرى عند انتهاء عمره الافتراضي. وللحيلولة دون إلحاق ضرر بالبيئة أو بصحة الإنسان جراء التخلص غير المنظم من النفايات، يرجى فصلها عن الأنواع الأخرى من النفايات وإعادة تدويرها بشكل مسئول لتعزيز إعادة الاستخدام المستدام للموارد المادية.

يجب على المستخدمين المنزليين الاتصال إما بتاجر التجزئة حيث اشتروا هذا المنتج أو مكتب الحكومة المحلية لديهم للحصول على تفاصيل عن مكان وكيفية تطبيق هذا البند لإعادة التدوير الآمن بيئيا.

يجب على المستخدمين التجاريين الاتصال بموردهم والتحقق من الشروط والأحكام للتواصل الشرائي. يجب عدم خلط هذا المنتج مع النفايات التجارية الأخرى للتخلص منها



سعداء معًا، سعداء غداً

### HAS-R3071(الوحدة الأساسية)

| التقسيم | | المواصفات |
|---|---|---|
| مصدر الطاقة | | AC 100~240V/ 50~60Hz |
| استهلاك الطاقة | | حد أقصى 14W |
| تحدث | | مكبر الصوت |
| معلومات ال LCD | LCD | TFT-LCD بوصة 7 |
| البيئة | درجة الحرارة | 0℃ to +40 |
| الشكل | الحجم | 239W X 132H X 25D (mm) |
| | الوزن | 384g |
| التركيب | | سطحي |

* قد يختلف استهلاك الطاقة لهذه الوحدة وفقًا للأجهزة الطرفية.





### الوحدة الخارجية

| البنود | | المواصفات | |
|---|---|---|---|
| | | HDS-R1000 | HDS-R2000 |
| استهلاك الطاقة | VN | حد أقصى 3.0W (الطاقة مقدمة من الشاشة) | حد أقصى 3.0W (الطاقة مقدمة من الشاشة) |
| | VP | حد أقصى 3.0W (الطاقة مقدمة من الشاشة) | حد أقصى 3.0W (الطاقة مقدمة من الشاشة) |
| | HD | حد أقصى 5.0W (الطاقة مقدمة من الشاشة) | حد أقصى 5.0W (الطاقة مقدمة من الشاشة) |
| نقاء الصورة | VN | VGA(0.3M pixel), NTSC | VGA(0.3M pixel), NTSC |
| | VP | VGA(0.3M pixel), PAL | VGA(0.3M pixel), PAL |
| | HD | HD(1M pixel) | HD(1M pixel) |
| إضاءة | | 0.1Lux | 0.1Lux |
| البيئة | درجة الحرارة | - ١٠ حتى ٥٠ درجة مئوية | - ١٠ حتى ٥٠ درجة مئوية |
| الحجم | الأبعاد | عرض ٨٨ * ارتفاع ١١٩,٦ * عمق ٢٠ ملم | عرض ٩٦ * ارتفاع ١٥٦ * عمق ٣٤ ملم |
| | الوزن | ٣٦ ج ا رم | ٣٦ ج ا رم |
| التركيب | | نوع تركيب سطحي/متساطح | نوع تركيب سطحي/متساطح |

# 03 وضع Away

عند إدخال كلمة السر، فإن 4 أزرار تعمل باللمس في الجزء السفلي من الشاشة ال LCD تمكن من إدخال 1-4.




## | لإلغاء تنشيط وضع Away

خلال الوضع Awya, أدخل منزلك والغي تنشيط وضع Away كما يلي.




تعرض شاشة الخطأ عندما تكون كلمة السر غير صحيحة

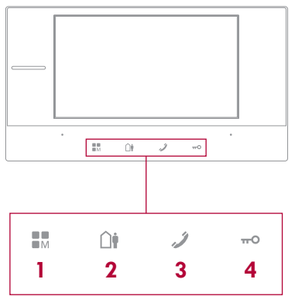


إذا فشل المستخدم في إدخال كلمة السر، يجب الضغط على الزر 1 للعودة إلى الشاشة السابقة، أو الزر 4 لإعادة المحاولة.

خطأ في الحساس على شاشة العرض




إذا كان الباب مفتوحًا عند الخروج / التشغيل، ستظهر شاشة الخطأ.





# 04 وضع الطوارئ

## 1. قبل الاستعمال

## | في حال عدم التمكن من تعطيل وضع away، فإن الجهاز يدخل في وضع طوارئ وتحتاج الى ادخال كلمة مرور لتعطيل وضع الطوارئ.(* كلمة المرور هي نفس كلمة مرور الدخول في وضع away)

## 2 .وضع الطوارئ

اذا كان وضع الطوارئ مفعل
أو تم اكتشاف محاولة دخول، فإن النظام
سيقوم باصدار صوت انذار

عند إدخال كلمة السر، فإن 4 أزرار تعمل باللمس في الجزء السفلي من الشاشة ال LCD تمكن من إدخال 1-4.




## | كيفية تعطيل وضع الطوارئ

عند تفعيل وضع الطوارئ، يظهر ذلك على الشاشة. قم بالضغط على زر away ثم ادخل كلمة المرور
وبذلك يتم تعطيل او ايقاف وضع الطوارئ.(في حال عدم ايقاف/تعطيل وضع الطوارئ، فانه سيتوقف في خلال 15دقيقة)



### إذا أراد المستخدم مشاهدة الفيديو خارج المدخل (مراقبة المدخل)

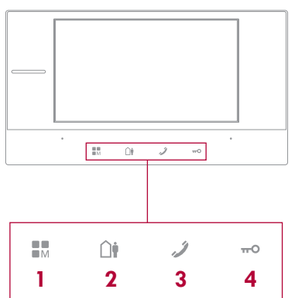


يمكن للمستخدم مراقبة هاتف الباب 1 بالضغط على زر انتقال مرة واحدة وهاتف الباب 2 بالضغط عليه مرة أخرى.
إذا ضغط المستخدم على زر الاتصال أثناء المراقبة، تبدأ المكالمة ويمكنك التحدث لمدة تصل إلى دقيقتين.



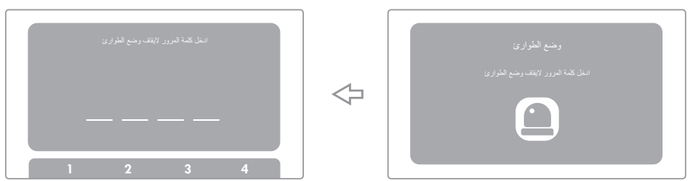

## 1. قبل الاستخدام

كلمة السر مطلوبة لتشغيل / إيقاف تشغيل الوضع. (* كلمة السر الأولية هي "1234")

### شروط

زمن التأجيل: الوقت الذي يبدأ فيه المستخدم في الخروج، حتى يعود المستخدم أو يغادر المنزل. انظر زمن التأجيل الداخلي [ وضع Away ] في قائمة الإعدادات ص١٣ لتغيير زمن التأجيل.

## 2. وضع Away

يمكنك ضبط وضع Away عند الخروج من المنزل.

عند إدخال كلمة السر، فإن 4 أزرار تعمل باللمس في الجزء السفلي من الشاشة ال LCD تمكن من إدخال 1-4.




### كيفية ضبط وضع Away

إذا أغلق المستخدم جميع الأبواب وضغط على الزر وأدخل كلمة السر في نافذة إدخال كلمة السر كما هو موضح أدناه، فسيتم عرض "صوت تنبيه" يشير إلى زمن التأجيل. بعد اكتمال التأجيل، يتم تنشيط وضع Away.



## 5. أدمن

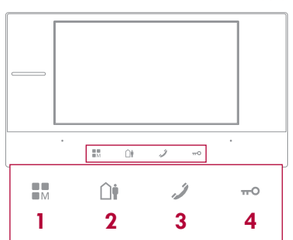إعادة ضبط وقت الانتهاء والمنتج.

* أثناء الإعداد، يمكنك التشغيل باستخدام الأزرار الموجودة في الجزء السفلي من الشاشة الـ LCD (السابق/يسار، أعلى/يمين، أسفل/ضبط).




### مكونات القائمة




### الوظيفة

| القائمة | الوظيفة |
|---|---|
| وقت انتهاء المكالمة | ضبط وقت انتهاء المكالمة |
| إعادة ضبط المصنع | القيام بإعادة ضبط المصنع |





## 1. الرد من خلال هاتف الباب

الرد على المكالمات من خلال هاتف الباب.

يرجى توخي الحذر عند استخدام وظيفة فتح الباب لأنها قد تسبب مشكلة أمنية بسبب خطأ المستخدم.

### عندما تأتي مكالمة من هاتف الباب






يتم عرض أيقونة هاتف الباب على الشاشة مع فيديو هاتف الباب وصوت نغمة الرنين. اضغط على زر الاتصال للرد على المكالمة على النحو الوارد أعلاه. إذا لم يرد المستخدم على المكالمة، فسوف تنتهي تلقائيًا بعد 30 ثانية.

### إنهاء مكالمة هاتف الباب (الإنهاء التلقائي بعد دقيقتين)

اضغط على زر الاتصال مرة أخرى أثناء المكالمة لإنهاء المكالمة.




### وظيفة فتح الباب

إذا قام المستخدم بالضغط على زر "فتح الباب" أثناء المكالمة، يتم فتح الباب وتنتهي المكالمة تلقائيًا.




### إذا جاءت مكالمة من هاتف الباب 2 أثناء التحدث على هاتف الباب



عندما تأتي مكالمة من هاتف الباب 1، تومض أيقونة هاتف الباب 1 وتُعرض أيقونة زرقاء عندما يضغط المستخدم على زر الاتصال.
تومض أيقونة هاتف الباب 2 عند تلقي مكالمة من هاتف الباب 2 أثناء المكالمة باستخدام هاتف الباب 1.
الضغط على زر الاتصال ينهي المكالمة بهاتف الباب 1 ، ويبدأ الاتصال بهاتف الباب 2 .



عندما تأتي مكالمة من هاتف الباب 2، تومض أيقونة هاتف الباب 2 وتُعرض أيقونة زرقاء عندما يضغط المستخدم على زر الاتصال.
تومض أيقونة هاتف الباب 1 عند تلقي مكالمة من هاتف الباب 1 أثناء المكالمة باستخدام هاتف الباب 2.
الضغط على زر الاتصال ينهي المكالمة بهاتف الباب 2 ، ويبدأ الاتصال بهاتف الباب 1 .

## 4. الضبط-كلمة السر

قائمة لتغيير كلمة سر المستخدم عند إعداد أو إلغاء وضع الخروج.

* أدخل كلمة السر الحالية مرة واحدة وكلمة السر الجديدة مرتين.
* عند إدخال كلمة السر، فإن 4 أزرار تعمل باللمس في الجزء السفلي من الشاشة ال LCD تتيح إدخال من 1~4




### مكونات القائمة




### الوظيفة

| القائمة | الوظيفة |
|---|---|
| الزر السفلي LCD | أدخل الأرقام<br>* إذا فشل إدخال كلمة السر: 1 - خروج/ 4 - إعادة المحاولة |

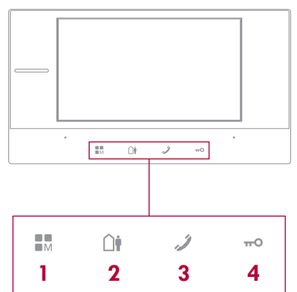

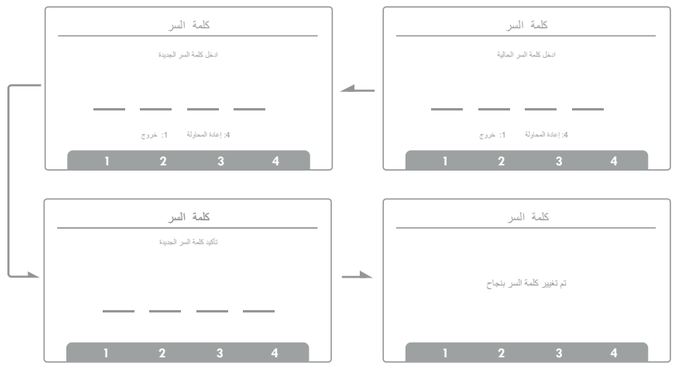

## 4. الضبط-المعلومات

* أثناء الإعداد، يمكنك العمل باستخدام الأزرار أسفل الشاشة الـ LCD (السابق/يسار/يمين/ضبط)




### مكونات القائمة




### الوظيفة

| القائمة | الوظيفة |
|---|---|
| المعلومات | قادرة على التحقق من معلومات المنتج. |
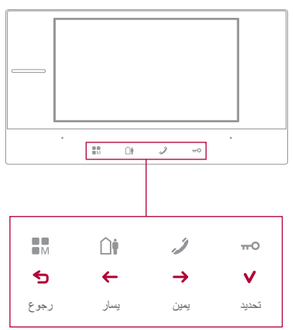
## 4. ضبط(1)

تغيير كلمة المرور، الخروج، تعيين وقت الإصدار، وتعيين اللغة.

* أثناء الإعداد، يمكنك التشغيل باستخدام الأزرار الموجودة في الجزء السفلي من الشاشة ال LCD (السابق/يسار، أعلى/يمين، أسفل/ضبط).




### مكونات القائمة




### الوظيفة

| القائمة | الوظيفة |
|---|---|
| كلمة السر | تغيير كلمة السر الخاصة بك |
| الوقت المستغرق للدخول في وضع السكون | تغيير الوقت المحدد لوضع الخروج |
| الوقت المستغرق للخروج من وضع السكون | تغيير وقت الانتظار |
| اللغة | اختيار اللغة |





## 4. ضبط(2)

* أثناء الإعداد، يمكنك التشغيل باستخدام الأزرار الموجودة في الجزء السفلي من الشاشة ال LCD (السابق/يسار، أعلى/يمين، أسفل/ضبط).




### مكونات القائمة




### الوظيفة

| القائمة | الوظيفة |
|---|---|
| معلومات | التحقق من معلومات المنتج |
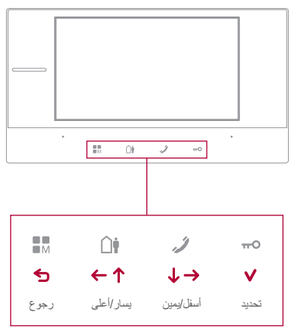
## 2. العرض

ضبط السطوع والتباين وتدرج الألوان ووقت إغلاق الشاشة.

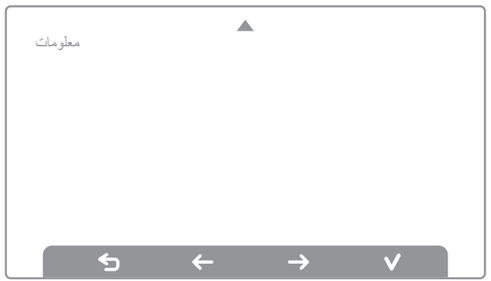* أثناء الإعداد، يمكنك التشغيل باستخدام الأزرار الموجودة في الجزء السفلي من الشاشة ال LCD (السابق/يسار، أعلى/يمين، أسفل/ضبط).




### مكونات القائمة




### الوظيفة

| القائمة | الوظيفة |
|---|---|
| التباين | ضبط التباين |
| سطوع | ضبط السطوع |
| اللون | ضبط الألوان |
| وقت سكون الشاشة | ضبط مدة إغلاق العرض |





## 3. الصوت

ضبط صوت هاتف الباب، وصوت المكالمة ونوع الموسيقى.

* أثناء الإعداد، يمكنك التشغيل باستخدام الأزرار الموجودة في الجزء السفلي من الشاشة ال LCD (السابق/يسار، أعلى/يمين، أسفل/ضبط).




### مكونات القائمة




### الوظيفة

| القائمة | الوظيفة |
|---|---|
| مستوى صوت المكالمة | ضبط صوت هاتف الباب |
| مستوى صوت الرنين | ضبط صوت المكالمة |
| النغمة | تحديد النغمة |

## HAS-R3071



المنتج



Bracket



سلك حساس (1EA)2P Mag

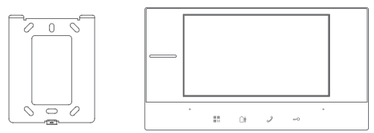

سلك كاميرا الباب (2EA)4P



(4EA) 4X20mm
برغي تثبيت ال Bracket



(1EA) 3X6mm
برغي تثبيت المنتج

## HDS-R1000



المنتج



3X6mm(1EA)
برغي تثبيت المنتج



(2EA) 4X20mm
برغي تثبيت ال Bracket



Bracket

## HDS-R2000



المنتج



كاب البرغي(2p)
غطاء البرغي



(2EA) 6X35mm
استخدام حائطي



(2EA) 4X30mm
برغي تثبيت المنتج



(2EA) 3.5X30mm
برغي تثبيت المنتج





### 1. الرئيسية

تتيح لك أزرار اللمس الموجودة في الجزء السفلي من الشاشة ال LCD. تشغيل الجهاز.

* أثناء الإعداد، يمكنك العمل باستخدام الأزرار أسفل الشاشة ال LCD (السابق/يسار/يمين/ضبط)




### مكونات القائمة




### الوظيفة

| القائمة | الوظيفة |
|---|---|
| الشاشة | ضبط لون الشاشة والتباين والتشبع، وقت إغلاق الشاشة. |
| الصوت | تحديد مستوى صوت الجرس، صوت المكالمة، ونغمة الرنين. |
| الاعدادات | تحديد مستوى صوت الجرس، صوت المكالمة، ونغمة الرنين. |
| ادارة الجهاز | وقت إنهاء المكالمة/ التهيئة. |

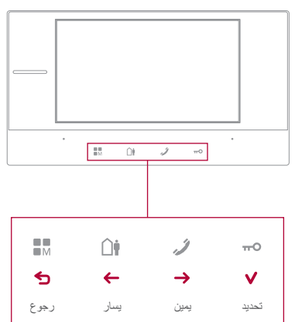


1. فتح ← التمكين لفتح الباب
2. اتصال ← ↑ التمكين للضغط على الزر والرد على المكالمات من هاتف الباب
3. Away → ↓ تمكين / تعطيل مراقبة الباب ووضع Away
4. القائمة ✓ أدخل قائمة التهيئة





## شبكة أسلاك

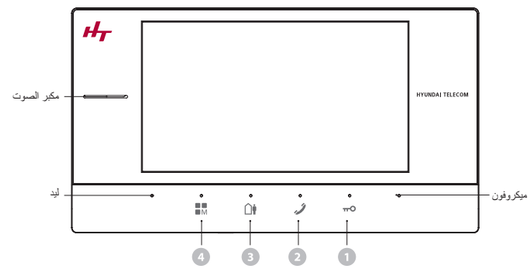


### ملاحظات هامة للتركيب

لا تقم بتثبيت وحدات الشاشة والكاميرا بحيث تتعرضا للأوساخ أو أشعة الشمس المباشرة (أو أي ضوء قوي آخر) أو الرطوبة المباشرة أو ارتفاع درجة الحرارة (أكثر من 50 درجة) أو ظروف الرطوبة العالية.
لا تختار موقع تركيب معرض للاهتزاز أو الاصطدام. AC بحيث يسهل رؤية ال LCD وتشغيل الشاشة.
حدد موقع التركيب بالقرب من مخرج

## التثبيت

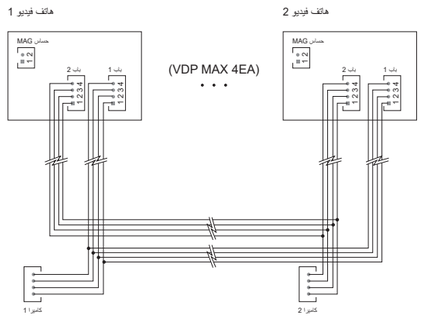


### خطوات التثبيت بالترتيب

يتم تثبيت الصندوق الخلفي مدفونًا على ارتفاع 1400 ~ 1500 مم من الأسفل
رتب الأسلاك بحيث يمكن توصيلها ب SET ,ثم ثبت الكتفية الجدارية على الصندوق الخلفي عن طريق ضبط الزاوية باستخدام برغي (M4X25, 4EA).
أكمل الأسلاك الداخلية لـ HAS-R3071.
علق MAIN UNIT على صنارة من مكانين في الكتفية الجدارية ثم صل الـ HOLE CENTER للجزء "A" مع الـ HOLE CENTER ال
للـHAS-R3071
ثبت باستخدام برغي SCREW (M3X6, 1EA) للـHOLE CENTER مع موقع "A".

يحتوي هذا الجزء على مواد يمكن أن تؤدي إلى إصابة خطيرة أو حتى الموت. يرجى قراءة المحتويات ومعرفتها بشكل كامل من أجل الاستخدام الصحيح للجهاز.

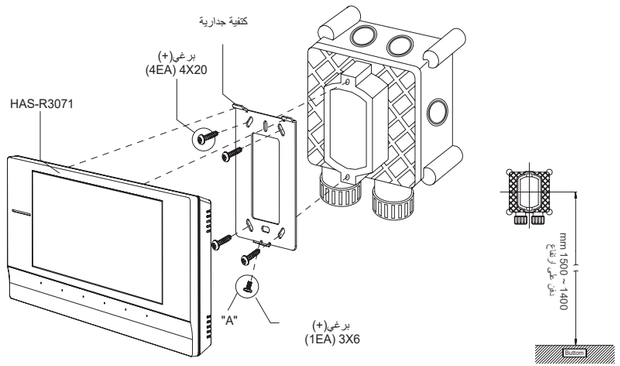

لا تعرض المنتج للتأثيرات الفيزيائية أو الدخان أو الزيت أو الماء



يحظر أي محاولات للفكك، أوالإصلاح، أو إعادة التصميم



إذا كان هناك أي ضجيج غير طبيعي أو رائحة أو دخان ينبعث من المنتج، توقف عن استخدامه فوراً واتصل بمركز الخدمة



لا تستخدم الماء أو المواد الكيميائية مثل الكحول لمسح الجزء الخارجي من المنتج بل قم باستخدام قطعة قماش جافة فقط



للوقاية من حدوث إصابة، يجب تركيب المنتج على الأرض أو الجدار بأمان وفقًا لدليل التركيب



لا تقم بتركيب المنتج في مكان ساخن أو رطب بسبب معدات التسخين أو تلك التي تتعرض لأشعة الشمس المباشرة





يحتوي هذا الجزء على مواد يمكن أن تؤدي إلى إصابة خطيرة أو حتى الموت. يرجى قراءة المحتويات ومعرفتها بشكل كامل من أجل الاستخدام الصحيح للجهاز.



احرص على عدم دخول ماء إلى كاميرا هاتف الباب عند تنظيف المدخل



لا تضع أي منتجات تولد مغناطيسية قوية (مثل تلفاز كبير أو مكبر صوت) بالقرب من المنتج



ا تضغط على الأزرار بواسطة أشياء حادة، مثل المثقاب أو الدبوس، أو تضع أي منها في الفتحة



لا يعمل هذا المنتج في حال إيقاف قاطع التيار أو في انقطاع التيار الكهربائي



يرجى الحفاظ على دليل الاستخدام بأمان و تسليم الدليل إلى المالك الجديد لمنزلك في حال الانتقال إلى منزل آخر جديد



لا تترك المنتج في مكان حيث تنقط أو ترش فيه المياه

التركيب الكهربائي للمبنى يحتاج إلى أن يكون مجهز أ بمفتاح طاقة رئيسي ثنائي القطب على أن يكون هناك فاصل تواصل بين كل من القطبين لا تقل عن 3 مليمتر أو أكثر.

# جدول المحتويات

I الاحتياطات
احتياطات الاستخدام 04
الهيكل الخارجي والوصف 06
التركيب والأسلاك 07
تكوين المنتج 08

II كيفية الاستخدام
تركيب شاشة 09
الاتصال 17
وضع Away 19
وضع الطوارئ 21

III المواصفات
المواصفات 22
ضمان المنتج 24

وبما أن هذا النظام تم تطويره وإنتاجه من قبل مركز البحث والتطوير في هيونداي للاتصالات HYUNDAI TELECOM ولديه وظائف مريحة متعددة، يرجى قراءة دليل الاستخدام بعناية قبل الاستخدام حتى يمكنك فهم كيفية استخدامه تمامًا. يمكن تعديل وظائف هذا المنتج أو محتوى الدليل بغرض تحسين الجودة دون إشعار مسبق.

HYUNDAI TELECOM

# Instruction Manual

HAS-R3071

